

**INSTALLATION INSTRUCTIONS**  
**for the**  
**MAIN PROCESSOR BOARD A1**  
**on the**  
***Kodak X-Omat* MULTILOADER 7000**  
**Service Code: 3444**  
***Kodak* MINILOADER 2000/2000P**  
**Service Codes: 3477/3479**  
***Kodak X-Omat* MULTILOADER 300/300 PLUS**  
**Service Codes: 3058/3511**



**Important**

Qualified service personnel must install this kit.



---

**PLEASE NOTE** The information contained herein is based on the experience and knowledge relating to the subject matter gained by Eastman Kodak Company prior to publication.

No patent license is granted by this information.

Eastman Kodak Company reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from any use of this information, even if loss or damage is caused by Kodak's negligence or other fault.



This equipment includes parts and assemblies sensitive to damage from electrostatic discharge. Use caution to prevent damage during all service procedures.

---

## MAIN PROCESSOR BOARD A1 Includes:

Part No.	Description	Quantity
1F5441	INSTALLATION INSTRUCTIONS	1
SP9405901	MAIN PROCESSOR BOARD A1	1

---

## Installing the MAIN PROCESSOR BOARD A1



### Important

Before installing the new MAIN PROCESSOR BOARD A1 in a *Kodak X-Omat* MULTILOADER 300, Modification 52, Part No. 9229220, must be installed.

[1] Use your LAPTOP COMPUTER to:

- (a) Record all existing equipment parameters and information.
- (b) Identify and record the version number of the existing OPERATING SOFTWARE installed in the equipment.



### Warning


Dangerous Voltage

[2] De-energize the equipment.

[3] Remove:

- COVERS
- PANELS

- [4] Disconnect all electrical connections from the old MAIN PROCESSOR BOARD A1.
- [5] Remove and keep the 4 MOUNTING SCREWS from the old MAIN PROCESSOR BOARD A1.
- [6] Remove and discard the old MAIN PROCESSOR BOARD A1.
- [7] Install the new MAIN PROCESSOR BOARD A1.

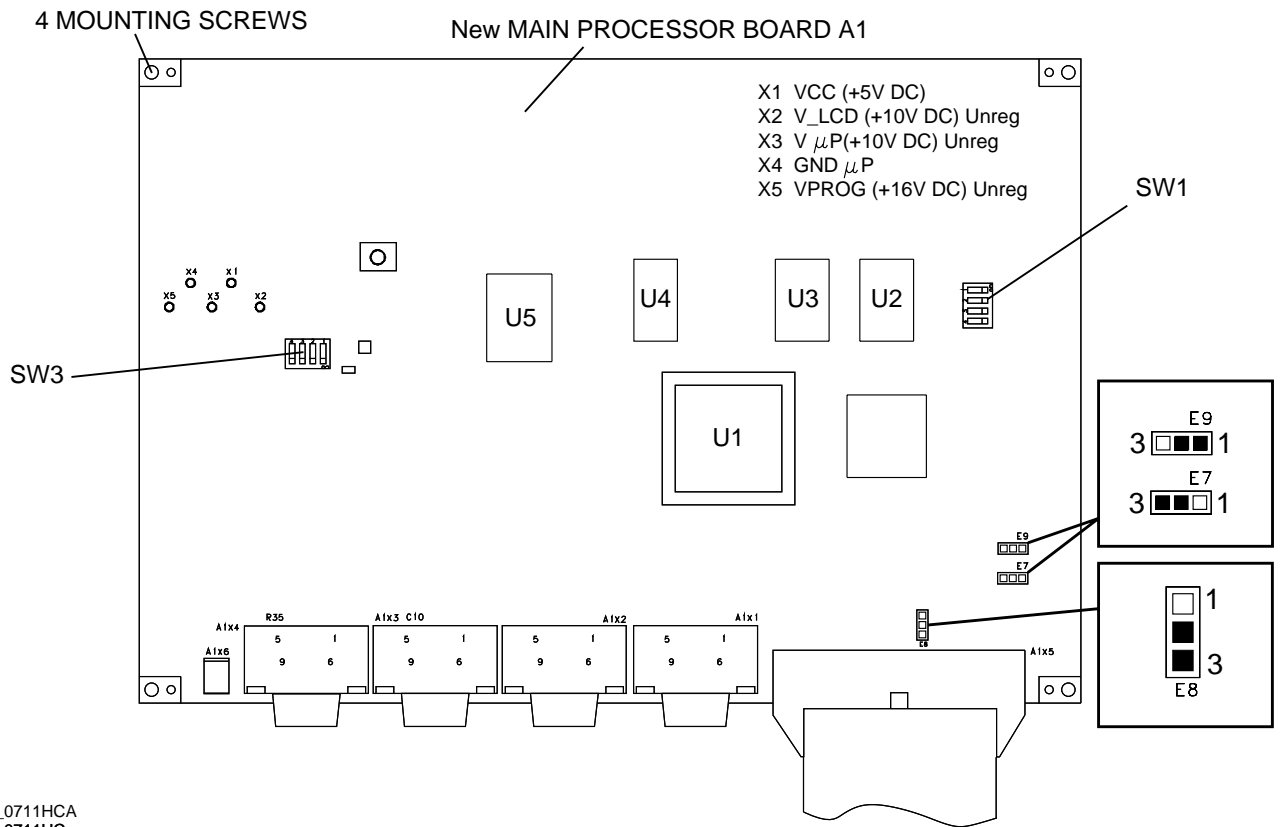

H186\_0711HCA  
H186\_0711HC

- [8] Connect all electrical connections to the new MAIN PROCESSOR BOARD A1.
- [9] Set:

Equipment	SW1-1	SW1-2	SW1-3	SW1-4	SW3-1	SW3-2	SW3-3	SW3-4
MULTILOADER 7000	ON	ON	ON	OFF	ON	OFF	OFF	OFF
MINILOADER 2000/2000P	OFF	ON	ON	OFF	ON	OFF	OFF	OFF
MULTILOADER 300	ON	OFF	ON	ON	ON	OFF	OFF	OFF
MULTILOADER 300 PLUS	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF

- [10] Install:

JUMPER	From:	To:
E7	PIN 2	PIN 3
E8	PIN 2	PIN 3
E9	PIN 1	PIN 2

[11] Install:

- PANELS
- COVERS



### **Warning**

Dangerous Voltage

[12] Energize the equipment.

[13] Use the menu options on your LAPTOP COMPUTER to:

- (a) Download the newest version of the OPERATING SOFTWARE.
- (b) Enter the parameters and information obtained in [Step 1](#).
- (c) Enter the correct time and date.
- (d) Clear all memories.

---

## **Checking the Operation**

- [1] Check that the equipment operates correctly.
- [2] Keep these instructions.

## **Publication History**

Publication Date	Publication No.	ECO No.	Changed Pages	File Name	Notes
23JAN03	1F5441	---	All	1F5441.fm	New Publication

*Kodak and X-Omat are trademarks.*